




NAYADIC

WASTEWATER TREATMENT SYSTEMS

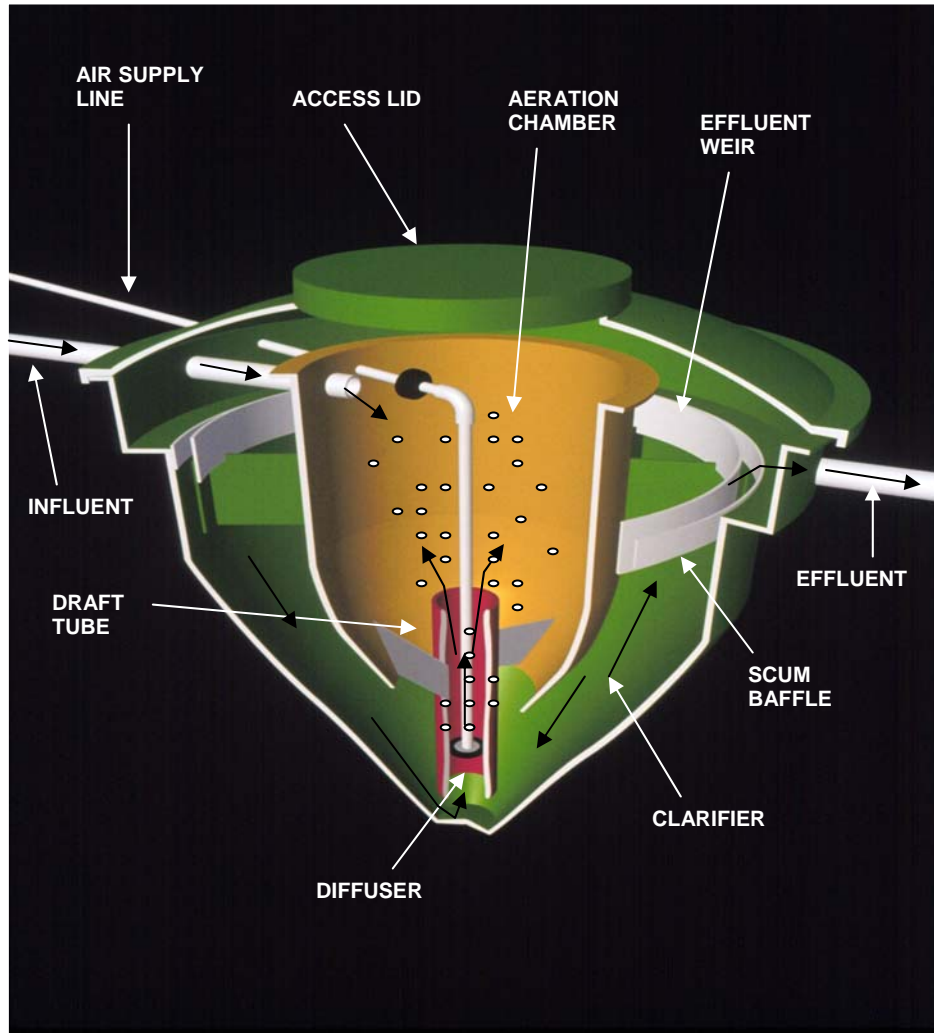

PROCEDURE FOR PUMPING THE **NAYADIC**:

1. Remove 30" access cover.
2. Carefully lower the pumper hose into the inner (aeration) chamber. Slide the hose down the wall of the inner tank until it rests on the bottom of the outer tank (clarifier). Do not insert the hose down the draft tube unless the airline and diffuser are removed.
3. Pump solids from the bottom of the outer tank. This will lower the liquid level in both the inner tank and outer tank simultaneously.
4. As the liquid level drops, the scum layer between the inner tank and scum baffle will normally break loose and drop to the bottom of the tank where it can be pumped out. With a garden hose, flush any remaining scum or residue to the bottom of the tank. If the scum layer is more than 2" thick, it should be removed first.
5. In areas with a high water table, immediately re-fill the tank with clear water to prevent shifting or floatation.